

Introduction

Thank you for purchasing our professional clippers

The clipper gives you the freedom to clip how and where you please from a choice of power sources. It performs like a mains powered clipper. It is used for dog, cat etc small animal with 10# blade, and horse, cattle etc big animal with 10W blade.

- Clipping horses and ponies for competition, for leisure, for housing, and for health
- Clipping cattle for shows, for market, and for cleaning
- Clipping of dogs, cats and other pets

SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using the Clipper.

DANGER: To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning, removing, or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by instruction.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an repair shop or repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
9. To disconnect turn control to "off" then remove plug from outlet.
10. **WARNING:** During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to the weather.

OPERATING INSTRUCTIONS

Please read the following instructions before using your new Clipper. Give it the care that a fine precision built instrument deserves and it will give you years of service. Plug cord into electrical outlet, operate 230 volt, 60 cycle

AC electrical current or as noted on unit.

2-SPEED OPERATION

Your Detachable Plus comes with normal and high speed operation. Use the normal setting for most cutting needs. Use the high speed setting for cutting through heavy hair. After using your Clipper, rewrap cord, and store in a safe place.

REMOVING BLADE SET

To remove blade set, first make sure your clipper motor is switched "OFF".

- A. Push locking button (1) in and hold.
- B. Push blade assembly(2) upward to position(3)
- C. Blade assembly can now be removed from clipper by pulling forward and upwards at (4)

NOTE: Hair may accumulate in the front cavity of the housing under the blade. If this happens, you can clean out the hair by brushing out the cavity with a small brush or an old toothbrush.

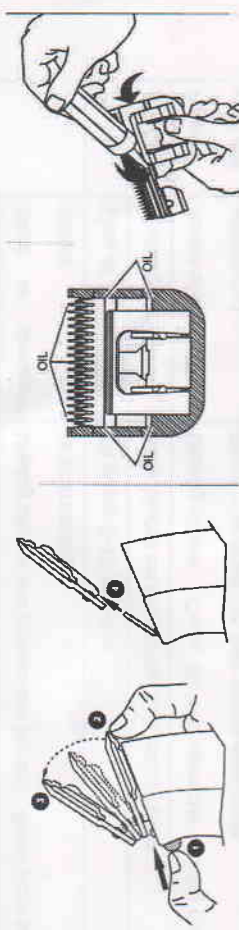


Diagram 1

Diagram 2

REPLACING OR CHANGING BLADE SET

To replace or change your blade set, slide the blade bracket onto the hinge of the clipper and with the clipper turned "ON", push the blade towards the clipper to lock into position.

USER MAINTENANCE

The internal mechanism of your motor clipper has been permanently lubricated by the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed.

CARE AND SERVICING OF YOUR CLIPPER BLADES

Blades should be oiled before, during, and after each use. If your clipper blades leave streaks or slow down, it's a sure sign blades need oil. Place a few drops of oil on the front and side of the cutter blades (Diagram 1). Wipe excess oil off blades with a soft, dry cloth. Spray lubricants contain insufficient oil for good lubrication, but are an excellent clipper blade coolant. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or worn out toothbrush. To clean the blades, we suggest to immerse the blades only into a shallow pan of Clipper Oil, while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper off and dry blades with a clean dry cloth and start clipping again. If upon cleaning your blades you find that the blades will still not cut, there may be a few fine pieces of hair trapped between the upper and lower blade. If this happens, you will need to snap the blade off the clipper. Proceed to slide the upper blade to one side, without loosening the tension spring or moving the upper blade completely out from under the tension spring (See Diagram 2 for position of blade). Wipe the surface between the blades clean with a dry cloth, then place a drop of clipper oil where the upper and lower blades meet and also in the